AVAILABLE PARTS ARE:
90889GS (LARGE GLASS SHADE)
90896TOPGS (UPPER GLASS SHADE)
90896BOTGS (LOWER GLASS SHADE)

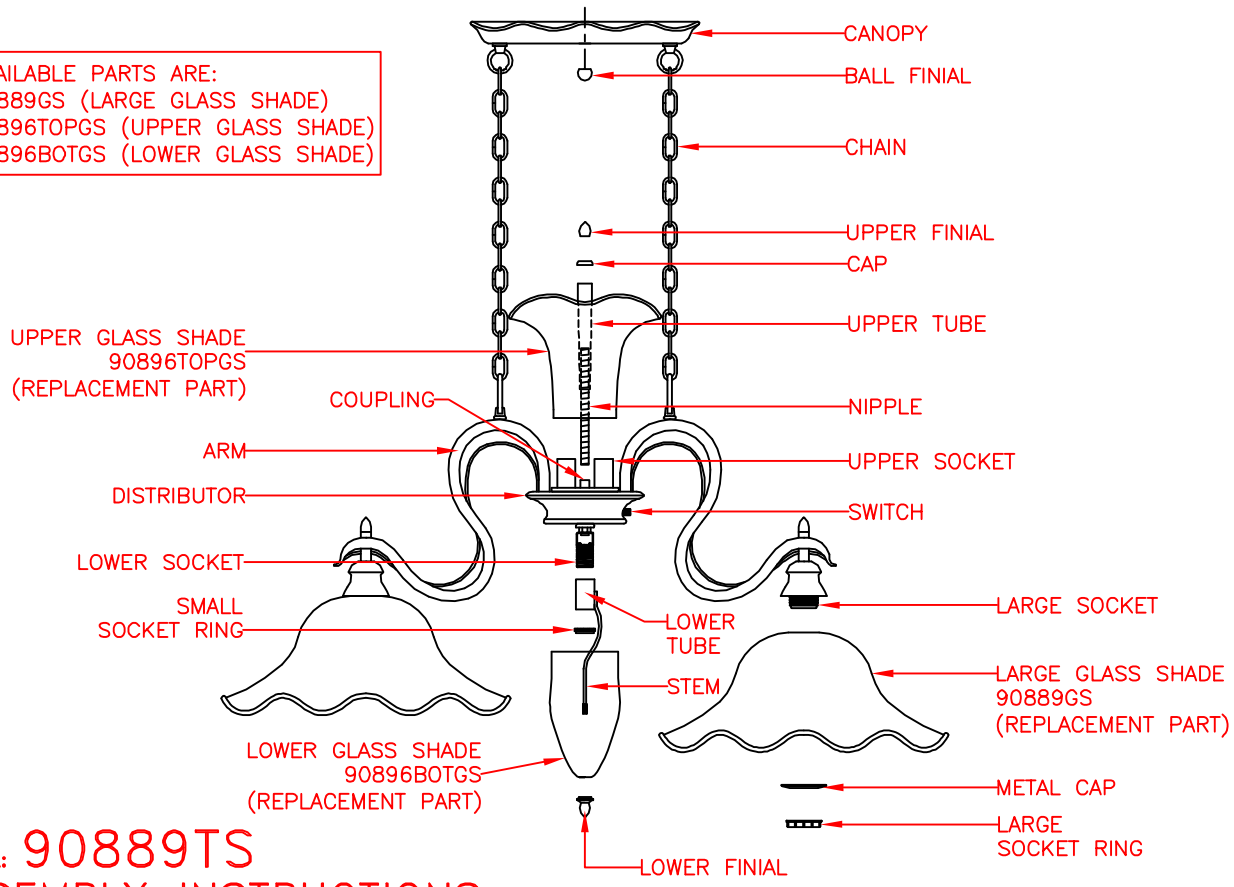

MODEL: 90889TS

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS AND EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS, PLIERS.

UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE:
CANOPY, (2) CHAINS, FIXTURE ASSEMBLY, UPPER FINIAL, CAP, UPPER TUBE, NIPPLE, (4) GLASS SHADES, (2) METAL CAPS, (2) SOCKET RINGS, LOWER TUBE WITH STEM AND LOWER FINIAL. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:
CROSSBAR, GREEN GROUND SCREW, (3) WIRE CONNECTORS, (2) 8–32 x 1–1/4" SCREWS, NIPPLE, NUT AND BALL FINIAL.

FIXTURE ASSEMBLY

1. DETERMINE THE LENGTH OF CHAIN REQUIRED TO HANG THE FIXTURE AT THE DESIRED HEIGHT. USING PLIERS, OPEN ONE END LINK OF CHAIN AND ATTACH TO THE CHAIN LOOP ON TOP OF THE FIXTURE. REMOVE OR ADD CHAIN AS DESIRED AT THIS TIME. LACE FIXTURE WIRE AND GROUND WIRE UP THROUGH EVERY OTHER LINK OF CHAIN.

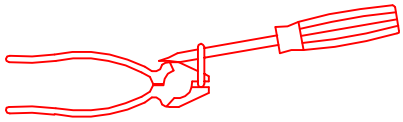

TO SPREAD A LINK OF CHAIN

USE A PAIR OF PLIERS AND A SCREWDRIVER AS SHOWN ABOVE, BEING CAREFUL TO WRAP THE JAWS OF THE PLIERS WITH CLOTH TO PROTECT THE FINISH OF THE CHAIN.

****STOP** COMPLETE INSTALLATION INSTRUCTIONS ON NEXT PAGE BEFORE PROCEEDING.**

FINAL ASSEMBLY

1. SCREW NIPPLE TO THE COUPLING ON TOP OF DISTRIBUTOR, THEN SLIDE UPPER TUBE, CAP OVER THE NIPPLE AND SECURE WITH UPPER FINIAL.
2. PLACE UPPER GLASS SHADE ON TOP OF DISTRIBUTOR.
3. INSTALL A 7 WATT MAX. TYPE "C" BULB (NOT INCLUDED) INTO EACH UPPER SOCKET.
4. SLIDE TUBE OVER LOWER SOCKET AND SECURE WITH SMALL SOCKET RING.
5. INSTALL A 7 WATT MAX. TYPE "C" NIGHT LIGHT BULB (NOT INCLUDED) INTO LOWER SOCKET.
6. SLIDE LOWER GLASS SHADE OVER STEM AND SECURE WITH FINIAL.
7. RAISE A LARGE GLASS SHADE OVER EACH LARGE SOCKET, THEN SECURE WITH METAL CAP AND LARGE SOCKET RING.
8. INSTALL A 100 WATT MAX. TYPE "A" BULB (NOT INCLUDED) INTO EACH LARGE SOCKET.
9. RESTORE POWER. YOUR NEW FIXTURE IS NOW READY TO USE.

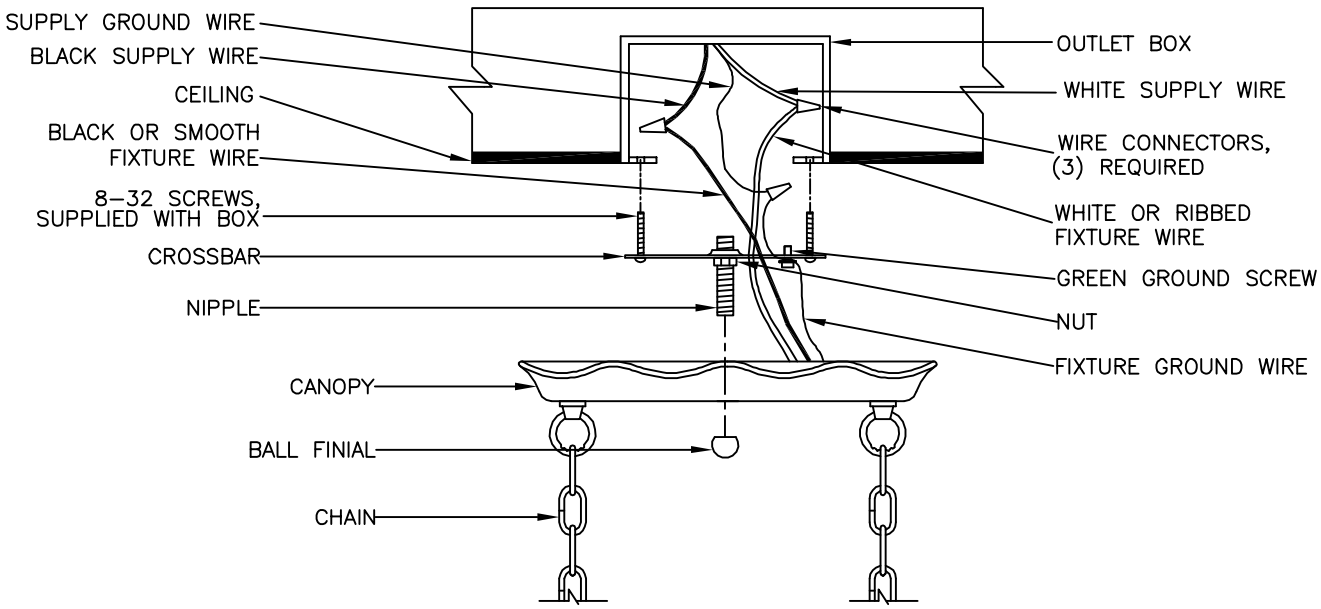

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

***THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE WEIGHT OF THIS FIXTURE. THE OUTLET BOX MUST BE DIRECTLY SUPPORTED BY THE BUILDING STRUCTURE.

COMPLETE FIXTURE ASSEMBLY INSTRUCTIONS FIRST (SEE PREVIOUS PAGE).

1. SCREW THE NIPPLE INTO THE CROSSBAR AND SECURE WITH NUT AS SHOWN. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8–32 x 1–1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

2. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED.

3. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.

4. RAISE THE FIXTURE TO THE CEILING AND SECURE IN PLACE WITH BALL FINIAL.

5. SEE PREVIOUS PAGE FOR FINAL ASSEMBLY INSTRUCTIONS.